PRODUCT PAGE

For technical and availability information, please contact Onmar.
+46 (0) 16 42 86 80
info@onmar.se
www.onmar.se



OB-13-1005-54



OB-13-1005-50



OB-13-2010-54

SCREW IN PLUNGER


Nylon & Rubber & PP

- Top mount design for installation where thickness limitation or solid core situation is present.
- Compact design can be used in numerous applications, including seat cushions, seat backs, small hatches, electric panels, etc.
- Enables the cushion to open fully and allows unlimited access to storage spaces.
- OB-13-1005-50 and OB-13-1005-54: Engagement can be adjusted by reversing or removing the spacer under catch.
- Reusable marking punch is required for proper installation and warranty will be voided in the event one is not used.
  Marking punch should be replaced after prolonged use to ensure ongoing proper alignment during installation.
- Screw size of OB-13-1005-50 and OB-13-1005-54: M4 or #8.
- Screw size of OB-13-2010-54: M4 or #8 for female part, and M6 or 1/4" for male part.


PATENTED



Marking Punch

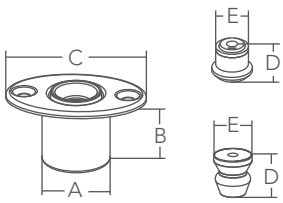


OB-13-1005-50, OB-13-1005-54 CATCH HEIGHT

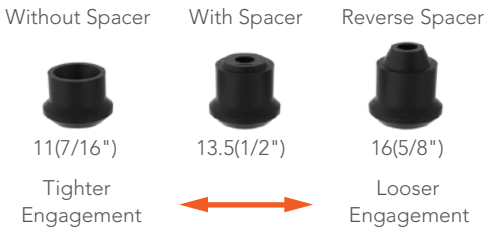

Part number	SS316 Cover	A *(mm)*	B	C	D	E	Holding power
OB-13-1005-50	None	28	26	58	13,5	13	8 kg
OB-13-1005-54	W/ Cover	28	26	60	13,5	13	8 kg
OB-13-2010-54	W/ Cover	50	38	84	27	25,4	10 kg
OB-10-9001	Aluminum Marking Punch for OB-13-1005-50 and OB-13-1005-54						
OB-10-9002	Aluminum Marking Punch for OB-13-2010-54						

INSTALLATION INSTRUCTION

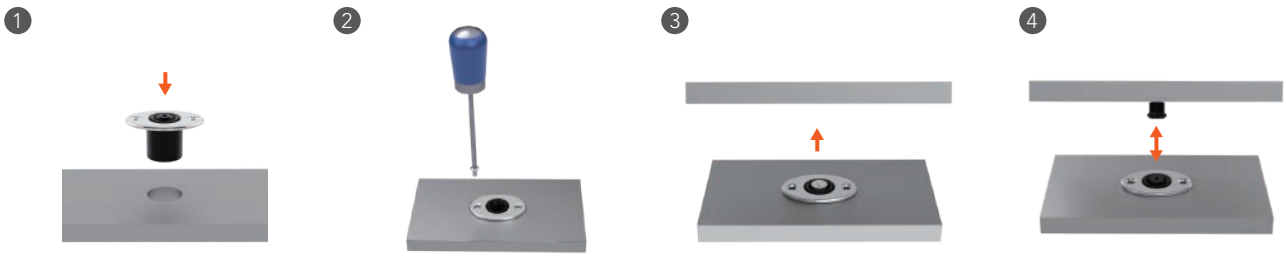

Install female part.

Tighten screws.

Insert marking punch to mark for alignment.

Install male part and hold in place.